


HEWLETT-PACKARD

**HP-41**

**USERS' LIBRARY SOLUTIONS**  
**Civil Engineering**

Includes barcode for easy software entry.

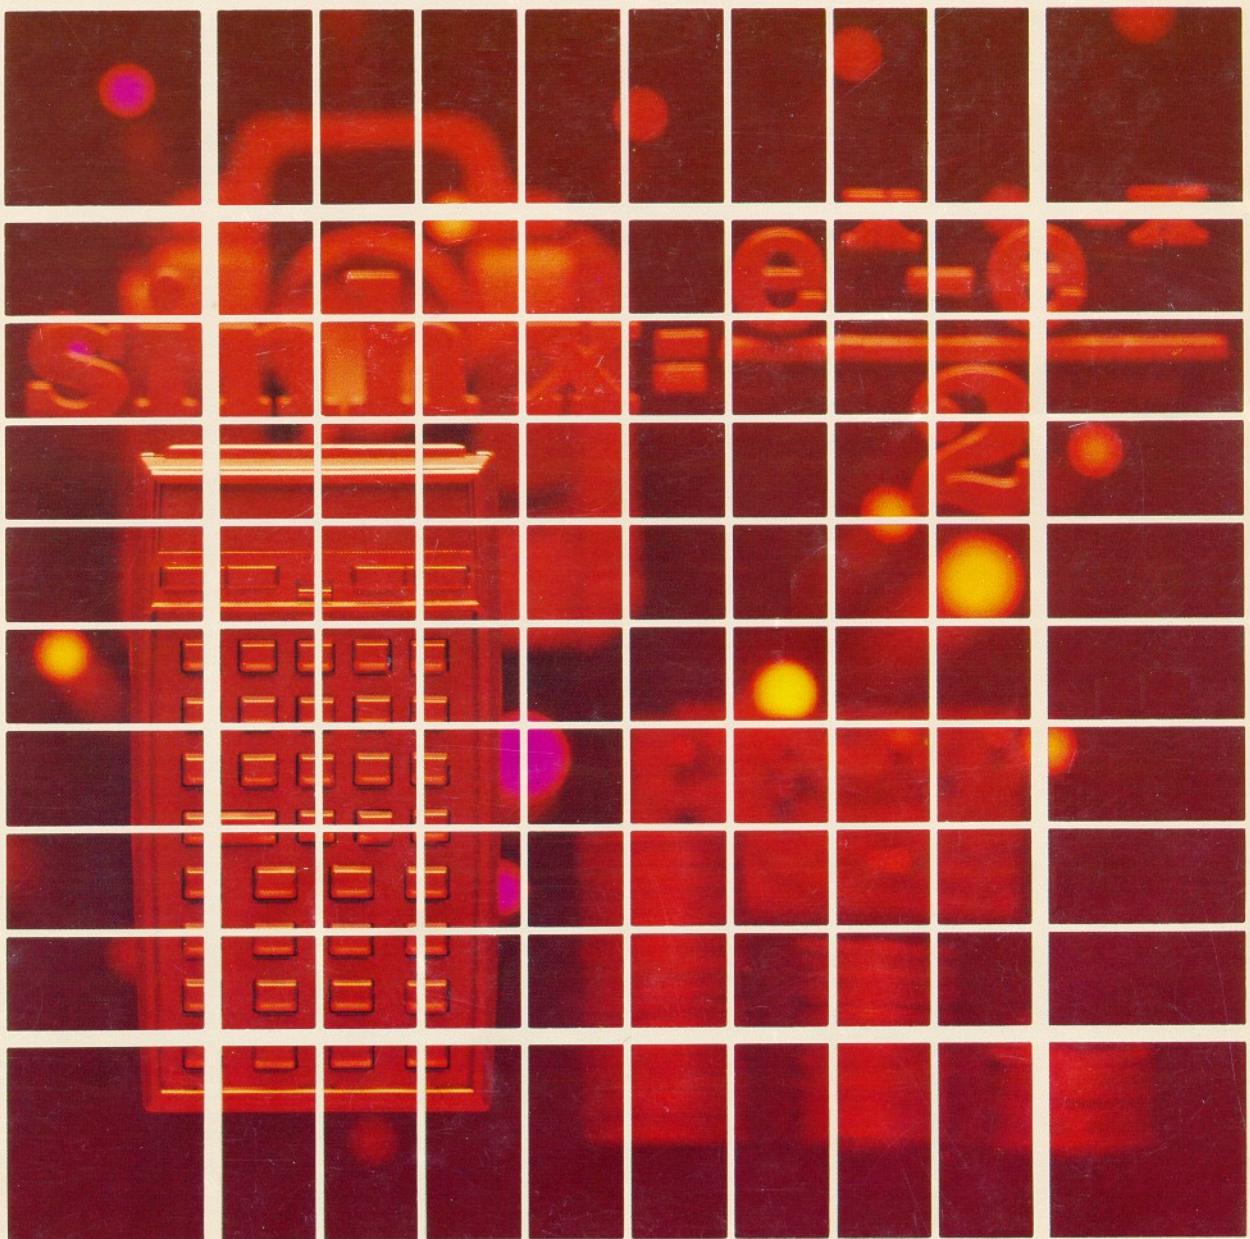

## **NOTICE**

**The program material contained herein is supplied without representation or warranty of any kind. Hewlett-Packard Company therefore assumes no responsibility and shall have no liability, consequential or otherwise, of any kind arising from the use of this program material or any part thereof.**

## INTRODUCTION

This HP-41C Solutions book was written to help you get the most from your calculator. The programs were chosen to provide useful calculations for many of the common problems encountered.

They will provide you with immediate capabilities in your everyday calculations and you will find them useful as guides to programming techniques for writing your own customized software. The comments on each program listing describe the approach used to reach the solution and help you follow the programmer's logic as you become an expert on your HP calculator.

## KEYING A PROGRAM INTO THE HP-41C

There are several things that you should keep in mind while you are keying in programs from the program listings provided in this book. The output from the HP 82143A printer provides a convenient way of listing and an easily understood method of keying in programs without showing every keystroke. This type of output is what appears in this handbook. Once you understand the procedure for keying programs from the printed listings, you will find this method simple and fast. Here is the procedure:

1. At the end of each program listing is a listing of status information required to properly execute that program. Included is the SIZE allocation required. Before you begin keying in the program, press **XEQ ALPHA SIZE ALPHA** and specify the allocation (three digits; e.g., 10 should be specified as 010).  
Also included in the status information is the display format and status of flags important to the program. To ensure proper execution, check to see that the display status of the HP-41C is set as specified and check to see that all applicable flags are set or clear as specified.
2. Set the HP-41C to PRGM mode (press the **PRGM** key) and press **■ GTO** **•** **•** to prepare the calculator for the new program.
3. Begin keying in the program. Following is a list of hints that will help you when you key in your programs from the program listings in this handbook.
  - a. When you see " (quote marks) around a character or group of characters in the program listing, those characters are ALPHA. To key them in, simply press **ALPHA**, key in the characters, then press **ALPHA** again. So "SAMPLE" would be keyed in as **ALPHA "SAMPLE" ALPHA**.
  - b. The diamond in front of each LBL instruction is only a visual aid to help you locate labels in the program listings. When you key in a program, ignore the diamond.
  - c. The printer indication of divide sign is /. When you see / in the program listing, press **÷**.
  - d. The printer indication of the multiply sign is × . When you see × in the program listing, press **×**.
  - e. The †-character in the program listing is an indication of the **APPEND** function. When you see †, press **■ APPEND** in ALPHA mode (press **■** and the K key).
  - f. All operations requiring register addresses accept those addresses in these forms:  
nn (a two-digit number)  
IND nn (INDIRECT: **■**, followed by a two-digit number)  
X, Y, Z, T, or L (a STACK address: **•** followed by X, Y, Z, T, or L)  
IND X, Y, Z, T or L (INDIRECT stack: **■ •** followed by X, Y, Z, T, or L)

Indirect addresses are specified by pressing **■** and then the indirect address. Stack addresses are specified by pressing **•** followed by X, Y, Z, T, or L. Indirect stack addresses are specified by pressing **■ •** and X, Y, Z, T, or L.

### Printer Listing

```
01♦LBL "SAM  
PLE"  
02 "THIS IS  
A"  
03 "I-SAMPLE  
"  
04 AVIEW  
05 6  
06 ENTER†  
07 -2  
08 /  
09 ABS  
10 STO IND  
L  
11 "R3="  
12 ARCL 03  
13 AVIEW  
14 RTN
```

### Keystrokes

<b>■ LBL</b>	<b>ALPHA</b>	<b>SAMPLE</b>	<b>ALPHA</b>
<b>ALPHA</b>	<b>THIS IS A</b>	<b>ALPHA</b>	
<b>ALPHA</b>	<b>■ APPEND</b>	<b>SAMPLE</b>	
<b>■ AVIEW</b>	<b>ALPHA</b>		
6			
<b>ENTER†</b>			
2	<b>CHS</b>		
<b>+</b>			
<b>XEQ</b>	<b>ALPHA</b>	<b>ABS</b>	<b>ALPHA</b>
<b>STO</b>	<b>■</b>	<b>•</b>	<b>L</b>
<b>ALPHA</b>	<b>R3=</b>	<b>■</b>	<b>ARCL</b>
<b>■ AVIEW</b>			
<b>ALPHA</b>			
<b>■ RTN</b>			

### Display

```
01 LBLT SAMPLE  
02T THIS IS A  
03T † SAMPLE  
04 AVIEW  
05 6  
06 ENTER†  
07 -2  
08 /  
09 ABS  
10 STO IND L  
11 R3=  
12 ARCL 03  
13 AVIEW  
14 RTN
```


## TABLE OF CONTENTS

1. STEEL COLUMN FORMULA . . . . .	1
Calculates the allowable load and the maximum load for structural steel columns.	
2. REINFORCED CONCRETE BEAMS . . . . .	8
Design and analysis of reinforced concrete beams.	
3. STRESS IN THICK-WALLED CYLINDERS . . . . .	19
Calculates the radial and tangential components of normal stress.	
4. PROPERTIES OF SPECIAL SECTIONS . . . . .	25
Find I <sub>x</sub> , I <sub>y</sub> , and Area for 5 different section types.	
5. COMPRESSIVE BUCKLING . . . . .	34
An interchangeable solution for the four properties of slender compression members or columns.	
6. VECTORS . . . . .	40
Addition, subtraction, cross product, dot product or find the magnitude, 2 or 3 dimensions.	
7. BEAMS FIXED AT BOTH ENDS . . . . .	50
Calculate deflection, slope, moment, and shear.	
8. SIMPLY SUPPORTED BEAMS . . . . .	61
Calculate deflection, slope, moment, and shear.	
9. CANTILEVER BEAMS . . . . .	71
Calculate deflection, slope, moment, and shear.	
10. BOLT TORQUE . . . . .	82
Calculate the torque needed to supply a specified load.	

## STEEL COLUMN FORMULA

This program computes the allowable load and the maximum load for structural steel columns using the American Institute of Steel Construction formula (1961). The column ends must be welded, riveted, or otherwise constrained against deflection and rotation.

Equations:

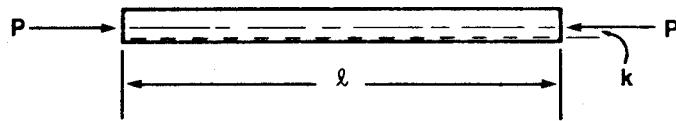

$$P_{\text{allow}} = A \sigma_y [1 - (\ell/k)^2 / 2 C^2] / m \quad \text{for } \ell/k < C$$

$$P_{\text{allow}} = A(1.0273 \times 10^{12} \text{ N/m}^2) / (\ell/k)^2 \quad \text{for } C < \ell/k \leq 200$$

$$C^2 = 2 \pi^2 E / \sigma_y$$

$$m = 5/3 \times 3(\ell/k)/8C - [(\ell/k)/2C]^3$$

$$P_{\text{max}} = P_{\text{allow}} m$$

Definitions:

$P_{\text{allow}}$  is the allowable load;

$P_{\text{max}}$  is the maximum load the column could carry;

$A$  is the area of the section;

$\ell$  is the length of the column;

$k$  is the minimum radius of gyration of the column cross section;

$I$  is the minimum moment of inertia of the cross section;

$\sigma_y$  is the yield point of the steel.

$E$  is the modulus of elasticity of steel.

**Reference:**


Roark, Raymond J.; Young, Warren C.; Formulas for Stress and Strain, McGraw-Hill, 1975.

**Remarks:**

Columns must be nominally straight, homogeneous, and of uniform cross section.

**Example 1:**

Two steel channels are lased together to form the cross section below:



Calculate the allowable and maximum loads using the following specifications:

$$k = 81.0 \times 10^{-3} \text{ m} \quad A = 9.46 \times 10^{-3} \text{ m}^2 \quad \sigma_y = 248 \times 10^6 \text{ N/m}^2 \quad l = 7.5 \text{ m}$$

**Keystrokes:**

[XEQ] [ALPHA] SIZE [ALPHA] 010

[XEQ] [ALPHA] METRIC [ALPHA]

248 [EEX] 6 [R/S]

9.46 [EEX] 3 [CHS] [R/S]

7.5 [R/S]

81 [EEX] 3 [CHS] [R/S]

[R/S]

**Display:**

YPS?

A?

L?

K?

Pa=918.2E3

PMAX=1.736E6

# User Instructions

# Program Listings

01+LBL "MET RIC" 02 "YPS?" 03 PROMPT 04 STO 09 05 207 E9 06 X<>Y 07 / 08 PI 09 X†2 10 * 11 ENTER↑ 12 + 13 SQRT 14 STO 03 15 10273 E8 16 STO 07 17 GTO 00 18+LBL "ENG LISH" 19 "YPS?" 20 PROMPT 21 STO 09 22 30 E6 23 X<>Y 24 / 25 PI 26 X†2 27 * 28 ENTER↑ 29 + 30 SQRT 31 STO 03 32 149 E6 33 STO 07 34+LBL 00 35 ENG 3 36 "A?" 37 PROMPT 38 STO 01 39 "L?" 40 PROMPT 41 STO 04 42 "K?" 43 PROMPT 44 STO 05 45+LBL A 46 CF 01 47 RCL 04 48 RCL 05 49 /	metric set-up ----- English set-up ----- Data prompting ----- Calculate P allow	50 STO 08 51 RCL 03 52 X>Y? 53 GTO 01 54 X<>Y 55 200 56 X<>Y 57 X>Y? 58 GTO 05 59 SF 01 60+LBL 01 61 3 62 RCL 08 63 RCL 03 64 / 65 X†2 66 STO 08 67 LASTX 68 RDN 69 - 70 RT 71 * 72 8 73 / 74 5 75 ENTER↑ 76 3 77 / 78 + 79 STO 06 80 FS? 01 81 GTO 00 82 RCL 09 83 X<>Y 84 / 85 1 86 RCL 08 87 2 88 / 89 - 90 * 91 GTO 07 92+LBL 00 93 RCL 07 94 RCL 04 95 RCL 05 96 / 97 X†2 98 / 99+LBL 07 100 RCL 01
---	--	--

# Program Listings

```

101  *
102  "Pa="
103 XEQ 05
104 RCL 06
105 *
106 "PMAX="
107 •LBL 05
108 ARCL X
109 AVIEW
110 STOP
111 RTN
112 .END.

```

P<sub>max</sub>

## Display

20

51

60

70

80

---

90

00

30

40

50



STEEL COLUMN FORMULA

PROGRAM REGISTERS NEEDED: 27

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 2)



ROW 2 (2 - 9)



ROW 3 (10 - 16)



ROW 4 (17 - 18)



ROW 5 (19 - 24)



ROW 6 (25 - 33)



ROW 7 (34 - 41)



ROW 8 (42 - 50)



ROW 9 (51 - 59)



ROW 10 (59 - 71)



ROW 11 (72 - 82)



ROW 12 (83 - 94)



ROW 13 (95 - 103)



ROW 14 (103 - 109)




ROW 15 (110 - 112)



## REINFORCED CONCRETE BEAMS

This program can be used in the design and analysis of rectangular reinforced concrete beams in accordance with the strength design method of the American Concrete Institute Code (ACI 318-71). The program solves interchangeably between the following six variables:

- $A_s$  - The area of nonprestressed tension reinforcement (in<sup>2</sup> or cm<sup>2</sup>);
- b - The width of the member (in or cm);
- M - The maximum internal bending moment (in-lb or kg-cm);
- d - The depth to the centroid of the reinforcing steel (in or cm);
- $f_c$  - The compressive strength of the concrete (psi or kg/cm<sup>2</sup>);
- $f_y$  - The yield strength of the steel (psi or kg/cm<sup>2</sup>).

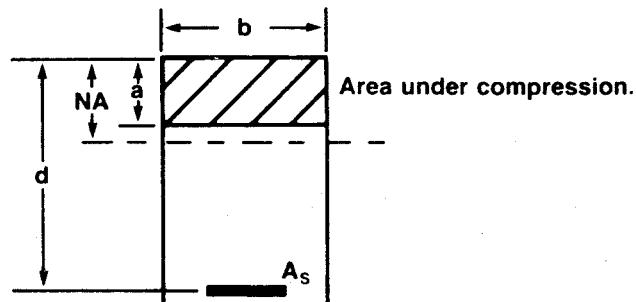

During calculation of the parameters listed above, the calculator checks to be sure that enough reinforcement has been specified to meet the minimum allowable value:

$$\frac{A_s}{bd} > \frac{200}{f_y}$$

If this condition is not met the display will flash 10.50 which signifies that the design does not meet section 10.5 of the ACI code. Stop the flashing by pressing [R/S]. Press [R↓] to see the current value of  $A_s$ . Press [R↓] again to see the minimum allowable value of  $A_s$ .

The program also checks for too much steel. Code section 10.32 specifies the maximum steel area as:

$$\frac{A_{smax}}{bd} = (0.6375) \beta_1 \frac{f_c}{f_y} \frac{87000}{87000 + f_y}$$

where

$$\beta_1 = \begin{cases} 0.85 \text{ for } f_c \leq 4000 \\ 0.85 - (f_c - 4000)/20000 \text{ for } f_c > 4000 \end{cases}$$

If too much steel has been specified, the calculator flashes 10.32. Stop the flashing by pressing [R/S], then press [R↓] to see the current steel area. Press [R↓] again to see the maximum allowable tension steel area.

If the program halts displaying "DATA ERROR", the input values are mathematically impossible to satisfy. This may be due to an entry error or the configuration may be mathematically undefined. If this is the case, increase the beam size and/or decrease the moment.

Optionally, the depth of the compression zone (a) may be calculated and the depth of the neutral axis (NA) may be calculated. The depth of the neutral axis is important since T-beams may be modeled as rectangular beams if the slab or flange equals or exceeds the depth of the neutral axis.

#### Equations:

$$M = d \phi A_s f_y - (0.59 \phi A_s^2 f_y^2) / (b f_c)$$

$\phi$  = factor of safety = 0.9

#### Reference:

ACI Standard Building Code Requirements for Reinforced Concrete (ACI 318-71), American Concrete Institute, May 1976 printing.

#### Remarks:

This program is intended as an aid to computation and cannot replace an understanding of ACI 318-71.

This program does not check for deflection or shear stress modes of failure. Refer to ACI 318-71 for specifics on deflection and shear stress.

#### Example 1:

For the specifications below, calculate the amount of reinforcing steel required.

$$M = 1.2 \times 10^6 \text{ in-lb} \quad b = 18 \text{ in} \quad d = 26 \text{ in} \quad f_c = 3500 \text{ psi}$$

$$f_y = 50000 \text{ psi}$$

## Keystrokes:

[USER]

## Display:

(set USER mode)

[XEQ] [ALPHA] SIZE [ALPHA] 011

[XEQ] [ALPHA] ENG [ALPHA]

AS?

1 [R/S]

b?

18 [R/S]

M?

1.2 [EEX] 6 [R/S]

d?

26 [R/S]

FC?

3500 [R/S]

FY?

50000 [R/S]

[A]

10.50 00

(Flashing display indicates that calculated steel area is too small to meet ACI minimum as specified in ACI 10.5. Press [R/S] to halt the flashing display. Press [R↓] to see the calculated value, then press [R↓] again to see the minimum value, then use the minimum value to recalculate M.)

[R/S] [R↓]

1.045 00

[R↓]

1.872 00

[STO] 01

1 [STO] 03

[C]

M=2.116E6

# User Instructions

STEP	INSTRUCTIONS	INPUT	FUNCTION	DISPLAY
1	Load program (USER mode)		[USER]	
2	Begin execution			
	English unit		[XEQ] ENG	AS?
	Metric		[XEQ] MET	AS?
	and input values	A <sub>s</sub>	[R/S]	b?
	(input 1 for unknown value)	b	[R/S]	M?
		M	[R/S]	d?
		d	[R/S]	FC?
		f <sub>c</sub>	[R/S]	FY?
		f <sub>y</sub>	[R/S]	
3	Calculate unknown			
	A <sub>s</sub>		[A]	AS=
	b		[B]	b=
	M		[C]	M=
	d		[D]	d=
	f <sub>c</sub>		[E]	FC=
	f <sub>y</sub>		[F]	FY=
4	To change a value, store the new value and place 1.0 in the register of the unknown.			
	A <sub>s</sub>	A <sub>s</sub>	[STO] 01	
	b	b	[STO] 02	
	M	M	[STO] 03	
	d	d	[STO] 04	
	f <sub>c</sub>	f <sub>c</sub>	[STO] 05	
	f <sub>y</sub>	f <sub>y</sub>	[STO] 06	
		1	[STO] (unknown)	
6	To calculate depth of compressive stress			
				SIZE: 011

# User Instructions

# Program Listings

<pre> 01*LBL "ENG" " 02 CF 00 03 GTO 00 04*LBL "MET" " 05 SF 00 06*LBL 00 07 ENG 3 08 "AS?" 09 PROMPT 10 STO 01 11 "b?" 12 PROMPT 13 STO 02 14 "M?" 15 PROMPT 16 STO 03 17 "d?" 18 PROMPT 19 STO 04 20 "FC?" 21 PROMPT 22 STO 05 23 "FY?" 24 PROMPT 25 STO 06 26 STOP 27*LBL 03 28 .59 29 RCL 05 30 RCL 02 31 * 32 / 33 RCL 01 34 RCL 06 35 * 36 * 37 LASTX 38 .9 39 * 40 * 41 LASTX 42 RCL 04 43 * 44 RTN 45*LBL A 46 XEQ 03 47 "AS=" 48 1 49 STO 10 </pre>	Initialization Common to all solutions ----- ----- ----- ----- ----- ----- A <sub>s</sub>	50 GTO 01 51*LBL F 52 XEQ 03 53 "FY=" 54 6 55 STO 10 56*LBL 01 57 RDH 58 CHS 59 ENTER↑ 60 RDH 61 X<>Y 62 RT 63 X↑2 64 X<>Y 65 STO 00 66 4 67 * 68 RCL 03 69 * 70 - 71 SQRT 72 + 73 RCL 00 74 / 75 2 76 / 77 CHS 78 GTO 00 79*LBL C 80 XEQ 03 81 "M=" 82 3 83 STO 10 84 RDH 85 X<>Y 86 - 87 GTO 00 88*LBL B 89 XEQ 03 90 "b=" 91 2 92 STO 10 93 GTO 01 94*LBL E 95 XEQ 03 96 "FC=" 97 5 98 STO 10 99*LBL 01 100 RDH	----- f <sub>y</sub> ----- ----- ----- ----- ----- ----- M ----- b ----- fc
--	---	--	---

# Program Listings

101 RCL 03		151 .85	
102 -		152 RCL 05	
103 /		153 RCL 09	
104 GTO 00		154 -	
105+LBL D	-----	155 2 E4	
106 XEQ 03	d	156 /	
107 "d="		157 X<0?	
108 4		158 CLX	
109 STO 10		159 -	
110 RDN		160 STO 07	
111 X<>Y		161 .6375	
112 RCL 03		162 *	
113 +		163 RCL 05	
114 X<>Y		164 *	
115 /	-----	165 RCL 06	
116+LBL 00	Store constants	166 /	
117 STO IND		167 RCL 08	
10		168 RCL 06	
118 281		169 +	
119 STO 09		170 /	
120 6117		171 RCL 08	
121 STO 08		172 *	
122 14.06		173 X>Y?	
123 FS? 00		174 GTO 00	
124 GTO 00		175 RCL 02	
125 4 E3		176 RCL 04	
126 STO 09		177 *	
127 87 E3		178 *	
128 STO 08		179 XEQ 08	
129 200		180 -	
130+LBL 00	-----	181 RCL 01	
131 RCL 06	Check for mini-	182 10.32	
132 /	minimum reinforcing	183 GTO 07	
133 RCL 01		184+LBL 00	-----
134 RCL 02		185 RCL IND	Display
135 RCL 04		10	
136 *		186 ARCL X	
137 /		187 AVIEW	
138 X>Y?		188 STOP	
139 GTO 00		189+LBL b	-----
140 RDN		190 SF 02	Calculate NA
141 LASTX		191 GTO 00	or a
142 *		192+LBL c	
143 XEQ 08		193 CF 02	
144 +		194+LBL 00	
145 RCL 01	-----	195 RCL 01	
146 10.5	flashing display	196 1.18	
147+LBL 07		197 *	
148 PSE	-----	198 RCL 02	
149 GTO 07	check for too	199 /	
150+LBL 00	much steel	200 RCL 06	

# Program Listings

201 *		
202 RCL 05		51
203 /		
204 FS? 02		
205 GTO 00		
206 RCL 07		
207 /		
208 "NR="		
209 ARCL X		
210 AVIEW		
211 STOP		60
212♦LBL 00		
213 "a="		
214 ARCL X		
215 AVIEW		
216 STOP		
217♦LBL 08		
218 SF 03		
219 1 E-4		
220 %		
221 RTN		70
222 .END.		
30		
40		80
50		90
		00

# REGISTERS, STATUS, FLAGS, ASSIGNMENTS

DATA REGISTERS				STATUS			
00	temporary storage	50		USER MODE			
	As			SIZE	011	TOT. REG.	62
	b			ENG	3	FIX	SCI
	M			DEG		RAD	GRAD
	d			FLAGS			
05	FC	55		#	INIT S/C	SET INDICATES	CLEAR INDICATES
	FY			00		metric	english
	1			02	a		NA
	87000 or 6117						
	4000 or 281						
10	control	60					
15		65					
20		70					
25		75					
30		80					
35		85					
ASSIGNMENTS							
				FUNCTION	KEY	FUNCTION	KEY
40		90					
45		95					

REINFORCED CONCRETE BEAMS

PROGRAM REGISTERS NEEDED: 52

HEWLETT PACKARD

SOLUTION BOOK:

CIVIL ENGINEERING

ROW 1 (1 - 4)



ROW 2 (4 - 8)



ROW 3 (8 - 16)



ROW 4 (17 - 23)



ROW 5 (23 - 32)



ROW 6 (33 - 44)



ROW 7 (45 - 50)



ROW 8 (51 - 57)



ROW 9 (58 - 70)



ROW 10 (71 - 80)



ROW 11 (80 - 88)



ROW 12 (89 - 95)



ROW 13 (95 - 103)



ROW 14 (104 - 110)



ROW 15 (111 - 120)



ROW 16 (120 - 124)



ROW 17 (125 - 130)



ROW 18 (131 - 142)



## REINFORCED CONCRETE BEAMS

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 19 (143 - 149)



ROW 20 (150 - 158)



ROW 21 (159 - 167)



ROW 22 (168 - 179)



ROW 23 (179 - 185)



ROW 24 (185 - 192)



ROW 25 (193 - 201)



ROW 26 (202 - 209)



ROW 27 (209 - 218)




ROW 28 (218 - 222)



## STRESS IN THICK-WALLED CYLINDERS

This program calculates the radial and tangential components of normal stress for thick-walled, cylindrical, pressure vessels.

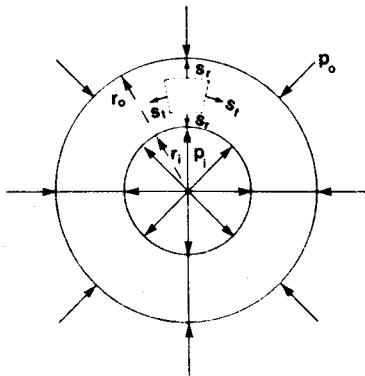

Equations:

$$s_r = \frac{r_i^2 p_i - r_o^2 p_o}{r_o^2 - r_i^2} - \frac{r_i^2 r_o^2 (p_i - p_o)}{r^2 (r_o^2 - r_i^2)}$$

$$s_t = \frac{r_i^2 p_i - r_o^2 p_o}{r_o^2 - r_i^2} + \frac{r_i^2 r_o^2 (p_i - p_o)}{r^2 (r_o^2 - r_i^2)}$$

where:

- $s_r$  is the radial component of stress;
- $s_t$  is the tangential component of stress;
- $r_i$  is the internal radius;
- $r_o$  is the outer radius;
- $r$  is the radius where calculated stresses occur;
- $p_i$  is the internal pressure;
- $p_o$  is the outside pressure.

Note: A negative stress indicates compression.

**Reference:**

J.E. Shigley  
 Mechanical Engineering Design, McGraw Hill, 1963.

**Example:**

A cylinder has an inner radius of 1.00 inch and an outer radius of 2.00 inches. The inner pressure is 10,000 pounds per square inch and outer pressure is 150 pounds per square inch. What are the values of radial and tangential stresses for radii of 1.00, 1.25, 1.75 and 2.00 inches?

**Keystrokes:**

[XEQ] [ALPHA] SIZE [ALPHA] 007

[XEQ] [ALPHA] CYL [ALPHA]

1 [R/S]

10000 [R/S]

2 [R/S]

150 [R/S]

1 [R/S]

[R/S]

[R/S]

1.25 [R/S]

[R/S]

[R/S]

1.75 [R/S]

[R/S]

[R/S]

2 [R/S]

[R/S]

**Display:**

RI?

PI?

RO?

PO?

R?

SR=-10.00E3

ST=16.27E3

R?

SR=-5.272E3

ST=11.54E3

R?

SR=-1.155E3

ST=7.422E3

R?

SR=-150.0E0

ST=6.417E3

# User Instructions

# Program Listings

01♦LBL "CYL"		51 +
"		52 "ST="
02 ENG 3		53♦LBL d
03 "RI?"		54 ARCL X
04 PROMPT		55 AVIEW
05 X†2		56 RTN
06 STO 00		57 GTO "R"
07 "PI?"		58 .END.
08 PROMPT		-----
09 STO 01		Display
10 *	-----	..
11 "RO?"	r <sub>i</sub> <sup>2</sup> Pi-r <sub>o</sub> <sup>2</sup> Po	
12 PROMPT		
13 X†2		
14 STO 02		
15 "PO?"		
16 PROMPT		
17 STO 03		
18 *		
19 -		
20 STO 06	-----	70
21 RCL 02	r <sub>i</sub> <sup>2</sup> r <sub>o</sub> <sup>2</sup> (Pi-Po)	
22 RCL 00		
23 -		
24 STO 04		
25 RCL 00		
26 RCL 02		
27 *		
28 RCL 01		
29 RCL 03		
30 -	-----	80
31 *	SR	
32 STO 05		
33♦LBL "R"		
34 RCL 06		
35 RCL 04		
36 /		
37 RCL 05		
38 "R?"		
39 PROMPT		
40 X†2		
41 /		
42 RCL 04		
43 /		
44 -		
45 "SR="		
46 XEQ d		
47 STOP		
48 LASTX	-----	ST
49 2		
50 *		00



STRESS IN THICK-WALLED  
CYLINDERS  
PROGRAM REGISTERS NEEDED: 14

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 3)



ROW 2 (4 - 11)



ROW 3 (11 - 20)



ROW 4 (21 - 33)



ROW 5 (33 - 40)



ROW 6 (41 - 48)



ROW 7 (49 - 56)





ROW 8 (57 - 58)



## PROPERTIES OF SPECIAL SECTIONS

For rectangles, triangles, ellipses, circles, and concentric circles, this program performs an interchangeable solution between the section dimensions and the principle moment of inertia about the x axis. The section area and the principle moment of inertia about the y axis may also be calculated.

Sections and Equations:

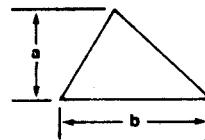

$$I_x = a^3 b / 12$$




$$I_x = a^3 b / 36$$

$$I_y = ab^3 / 12$$

$$I_y = ab^3 / 36$$

$$A = ab$$

$$A = ab/2$$

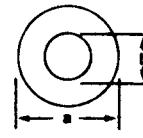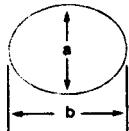

$$I_x = \pi a^3 b / 64$$

$$I_x = \frac{\pi a^4}{64} = I_y \quad I_x = \frac{\pi (a^4 - b^4)}{64} = I_y$$

$$I_y = \pi a b^3 / 64$$


$$A = \pi a^2 / 4$$

$$A = \pi a b / 4$$

$$A = \frac{\pi (a^2 - b^2)}{4}$$

Example 1:

For the rectangular section below, what is the moment of inertia about the x axis? What is the moment of inertia about the y axis?

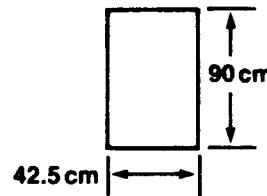

**Keystrokes:**

[USER]

**Display:**

(set USER mode)

[XEQ] [ALPHA] SIZE [ALPHA] 004

[XEQ] [ALPHA] REC [ALPHA]

a?

90 [R/S]

b?

42.5 [R/S]

IX?

[R/S]

[C]


IX=2.582E6

[E]

IY=575.7E3

**Example 2:**

What is the moment of inertia about the x-axis for the circle below? What is the area?

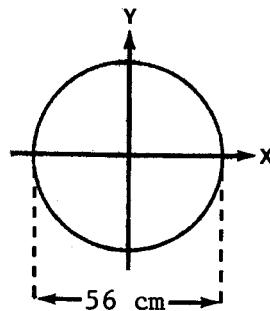**Keystrokes:**

[XEQ] [ALPHA] CIR [ALPHA]

**Display:**

a?

56 [R/S]

b?

[R/S]

[R/S]

[C]

IX=482.7E3

[D]

A=2.463E3

# User Instructions

# Program Listings

<pre> 01+LBL "REC " 02 CF 00 03 1 04 GTO 00 05+LBL "TRI " 06 CF 00 07 2 08 GTO 00 09+LBL "ELL " 10 CF 00 11 3 12 GTO 00 13+LBL "CIR " 14 SF 00 15 4 16 GTO 00 17+LBL "CC" 18 CF 00 19 5 20+LBL 00 21 ENG 3 22 STO 00 23 "a?" 24 PROMPT 25 STO 01 26 CLX 27 "b?" 28 PROMPT 29 STO 02 30 CLX 31 "IX?" 32 PROMPT 33 STO 03 34 STOP 35+LBL A 36 RCL 03 37 RCL 02 38 X#0? 39 / 40 GTO IND 00 41+LBL 01 42 12 43 GTO 00 44+LBL 02 45 36 46 GTO 00 </pre>	<p>Initialization</p> <p>Calculate a</p>	<pre> 47+LBL 03 48 PI 49 / 50 64 51+LBL 00 52 * 53 3 54 1/X 55 Y↑X 56 STO 01 57 "a=" 58 GTO 10 59+LBL 04 60+LBL 05 61 RCL 03 62 64 63 * 64 PI 65 / 66 RCL 02 67 X↑2 68 X↑2 69 + 70 SQRT 71 SQRT 72 STO 01 73 "a=" 74 GTO 10 75+LBL B 76 GTO IND 00 77+LBL 01 78+LBL 02 79+LBL 03 80 RCL 03 81 12 82 * 83 RCL 01 84 X↑2 85 LASTX 86 * 87 / 88 XEQ IND 00 89 STO 02 90 "b=" 91 GTO 10 92+LBL 02 93 3 94 * 95+LBL 01 </pre> <p>Calculate b</p>
--	--	---

# Program Listings

```

96 RTN
97♦LBL 03
98 3
99 /
100 16
101 *
102 PI
103 /
104 "b="
105 GTO 10
106♦LBL 05
107 RCL 01
108 X↑2
109 X↑2
110 RCL 03
111 64
112 *
113 PI
114 /
115 -
116 SQRT
117 SQRT
118 STO 02
119 "b="
120 GTO 10
121♦LBL C
122 RCL 02
123 RCL 01
124 XEQ 09
125 STO 03
126 "IX="
127 GTO 10
128♦LBL E
129 RCL 01
130 RCL 02
131 XEQ 09
132 "IY="
133 GTO 10
134♦LBL 09
135 ENTER↑
136 X↑2
137 GTO IND
00
138♦LBL 01
139 *
140 *
141 12
142 /
143 RTN
144♦LBL 02
145 *

```

-----  
Calculate I<sub>x</sub>

-----  
Calculate I<sub>y</sub>

-----  
I<sub>x</sub> or I<sub>y</sub>

```

146 *
147 36
148 /
149 RTN
150♦LBL 03
151 *
152 *
153 PI
154 *
155 64
156 /
157 RTN
158♦LBL 04
159♦LBL 05
160 X<>Y
161 X↑2
162 *
163 X<>Y
164 X↑2
165 X↑2
166 -
167 ABS
168 PI
169 *
170 64
171 /
172 RTN
173♦LBL D
174 RCL 01
175 RCL 02
176 *
177 GTO IND
00
178♦LBL 02
179 2
180 /
181♦LBL 01
182 GTO 00
183♦LBL 03
184 PI
185 *
186 4
187 /
188 GTO 00
189♦LBL 04
190♦LBL 05
191 RCL 01
192 X↑2
193 RCL 02
194 X↑2
195 -
196 PI

```

-----  
Calculate Area

# Program Listings

197 *		51	
198 4			
199 /			
200+LBL 00			
201 "A="			
202+LBL 10			
203 ARCL X	-----		
204 AVIEW	Display		
205 STOP			
206 .END.		60	
20		70	
30		80	
40		90	
50		00	

## **REGISTERS, STATUS, FLAGS, ASSIGNMENTS**


DATA REGISTERS				STATUS				
00	section code	50		SIZE	004	TOT. REG.	48	USER MODE
a				ENG	3	FIX	SCI	ON X OFF
b				DEG		RAD	GRAD	
Ix								
05		55		FLAGS				
				#	INIT S/C	SET INDICATES	CLEAR INDICATES	
						NONE		
10		60						
15		65						
20		70						
25		75						
30		80						
35		85						
40		90	ASSIGNMENTS					
			FUNCTION	KEY	FUNCTION	KEY		
45		95						

## PROPERTIES OF SPECIAL SECTIONS

PROGRAM REGISTERS NEEDED: 45

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 5)



ROW 2 (5 - 9)



ROW 3 (9 - 13)



ROW 4 (13 - 17)



ROW 5 (17 - 24)



ROW 6 (25 - 32)



ROW 7 (33 - 42)



ROW 8 (43 - 51)



ROW 9 (52 - 61)



ROW 10 (62 - 73)



ROW 11 (73 - 81)



ROW 12 (81 - 90)



ROW 13 (91 - 101)



ROW 14 (102 - 111)



ROW 15 (111 - 120)



ROW 16 (121 - 127)



ROW 17 (127 - 133)



ROW 18 (133 - 143)



## PROPERTIES OF SPECIAL SECTIONS

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 19 (144 - 155)



ROW 20 (155 - 167)



ROW 21 (168 - 177)



ROW 22 (178 - 188)



ROW 23 (189 - 201)



ROW 24 (201 - 206)




## COMPRESSIVE BUCKLING

This program performs an interchangeable solution for the four properties of slender compression members or columns:  $P_{cr}$ , the critical buckling load;  $E$ , the modulus of elasticity;  $I$ , the minimum moment of inertia; and  $\ell$ , the length of the member.

Equations:

Three configurations are possible, identified by the number of fixed ends on the member: 0, both ends hinged; 1, one end free and one fixed; 2, both ends fixed.

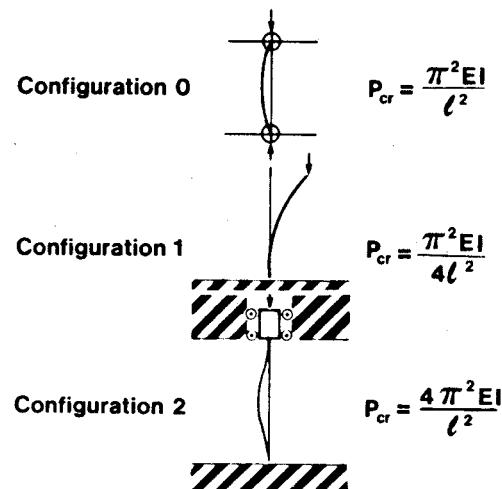

Remarks:

Uncertainties such as the amount of restraint at the ends, eccentricity of the load, initial warp, nonhomogeneity of the material and deflection caused by lateral loads, can cause very significant changes in the behavior of a compressive member.

Example 1:

If an 8 inch steel ( $E = 30 \times 10^6$  psi) piston rod (a piston rod has zero fixed ends) must withstand a load of 15000 pounds without buckling, what moment of inertia must it have?

**Keystrokes:**

[XEQ] [ALPHA] SIZE [ALPHA] 007

[XEQ] [ALPHA] COMPRES [ALPHA]

0 [R/S]

15000 [R/S]

30 [EEX] 6 [R/S]

[R/S]

8 [R/S]

**Display:**

GEOOMETRY?

P

E

I

L

I=3.242E-3

# User Instructions

SIZE: 007

# Program Listings

```

01 *LBL "COM
PRES"
02 ENG 3
03 SF 01
04 CF 02*
05 "GEOMETR
Y?"
06 PROMPT
07 STO 00
08 "P"
09 PROMPT
10 X=0?
11 XEQ b
12 STO 01
13 CLX
14 "E"
15 PROMPT
16 X=0?
17 XEQ a
18 STO 02
19 CLX
20 "I"
21 PROMPT
22 X=0?
23 XEQ a
24 STO 03
25 CLX
26 "L"
27 PROMPT
28 X=0?
29 XEQ b
30 STO 04
31 1
32 -
33 X=0?
34 SF 02
35 CF 00
36 "="
37 RSTO 05
38 GTO INT

```

```

00
39♦LBL 01
40 SF 00
41 XEQ 00
42 4
43 /
44 GTO d
45♦LBL 02
46 SF 00
47 XEQ 00
48 4
49 *

```

Initialization

-----

one fixed end

-----

2 fixed ends

```

50 GT0 8
51 *LBL 00
52 PI
53 X12
54 RCL 02
55 *
56 RCL 03
57 *
58 RCL 01
59 /
60 RCL 04
61 X12
62 /
63 FS? 00
64 RTN
65 *LBL d
66 FS? 01
67 1/X
68 FS? 02
69 SQRT
70 CLA
71 ARCL 06
72 ARCL 05
73 ARCL X
74 AVIEW
75 STOP
76 *LBL b
77 CF 01
78 *LBL a
79 ASTO 06
80 1
81 RTN
82 .END.

```

No fixed ends

## Display

unknown

6

one fixed end

2 fixed ends

0

# REGISTERS, STATUS, FLAGS, ASSIGNMENTS

DATA REGISTERS			STATUS			
00	output label	50	SIZE 007 ENG 3 DEG _____	TOT. REG. 27	USER MODE	
	P			FIX _____	SCI _____	ON _____ OFF X
	E			RAD _____	GRAD _____	
	I					
	l					
	"="	55				
05	unknown		FLAGS			
			#	INIT S/C	SET INDICATES	CLEAR INDICATES
			01		invert	don't invert
10		60				
15		65				
20		70				
25		75				
30		80				
35		85				
ASSIGNMENTS						
				FUNCTION	KEY	FUNCTION
40		90				
45		95				

COMPRESSIVE BUCKLING  
PROGRAM REGISTERS NEEDED: 21

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 2)



ROW 2 (3 - 5)



ROW 3 (5 - 14)



ROW 4 (14 - 23)



ROW 5 (23 - 31)



ROW 6 (32 - 39)



ROW 7 (40 - 46)



ROW 8 (47 - 55)



ROW 9 (56 - 66)



ROW 10 (66 - 74)



ROW 11 (75 - 82)




ROW 12 (82 - 82)



## VECTOR OPERATIONS

This program performs the basic vector operations of addition, cross product, and dot or scalar product. It also allows conversion between spherical and cartesian coordinates and can find the angle between two vectors.

Equations:

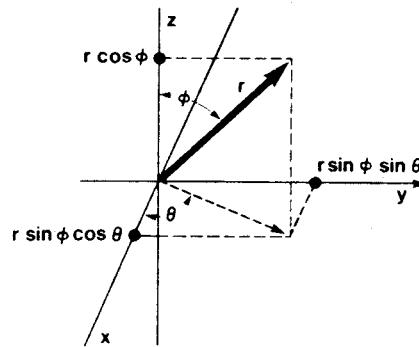

Coordinate conversions:

$$x = r \sin \phi \cos \theta$$

$$r = \sqrt{x^2 + y^2 + z^2}$$

$$y = r \sin \phi \sin \theta$$

$$\theta = \tan^{-1} (y/x)$$

$$z = r \cos \phi$$

$$\phi = \cos^{-1} (z / \sqrt{x^2 + y^2 + z^2})$$

Vector addition:

$$\bar{v}_1 + \bar{v}_2 = (x_1 + x_2) \bar{i} + (y_1 + y_2) \bar{j} + (z_1 + z_2) \bar{k}$$

Cross product:

$$\bar{v}_1 \times \bar{v}_2 = (y_1 z_2 - z_1 y_2) \bar{i} + (z_1 x_2 - x_1 z_2) \bar{j} + (x_1 y_2 - y_1 x_2) \bar{k}$$

Dot or scalar product:


$$\bar{v}_1 \cdot \bar{v}_2 = x_1 x_2 + y_1 y_2 + z_1 z_2$$

Angle between vectors:

$$\lambda = \cos^{-1} \left( \frac{\mathbf{v}_1 \cdot \mathbf{v}_2}{|\mathbf{v}_1| |\mathbf{v}_2|} \right)$$

Example:

An aircraft flies a heading of 212 degrees at 225 knots. The wind is reported at 20 knots and 140 degrees (which translates to 20 knots and 320 degrees since winds are reported opposite to the direction they blow). What is the course of the aircraft? What is the ground speed?

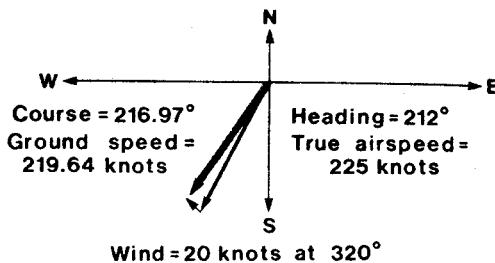

Keystrokes:

[XEQ] [ALPHA] SIZE [ALPHA] 008

[XEQ] [ALPHA] SPH [ALPHA]

225 [R/S]

90 [R/S]

212 [R/S]

20 [R/S]

90 [R/S]

320 [R/S]

[XEQ] [ALPHA] ADD [ALPHA]

[R/S]

[R/S]

Display:

R?

PHI?

THETA?

R?

PHI?

THETA?

R=219.64

PHI=90.00

THETA=216.97

# User Instructions

STEP	INSTRUCTIONS	INPUT	FUNCTION	SIZE: 008
				DISPLAY
1	Load program			
2	Begin execution:			
	for rectangular coordinates		[XEQ] REC	X?
	input x <sub>1</sub> ,y <sub>1</sub> ,z <sub>1</sub> ,x <sub>2</sub> ,y <sub>2</sub> ,z <sub>2</sub>	x <sub>1</sub>	[R/S]	Y?
		y <sub>1</sub>	[R/S]	Z?
		z <sub>1</sub>	[R/S]	X?
		x <sub>2</sub>	[R/S]	Y?
		y <sub>2</sub>	[R/S]	Z?
		z <sub>2</sub>	[R/S]	
	Go to step 3			
	for spherical coordinates		[XEQ] SPH	R?
	input R <sub>1</sub> ,φ <sub>1</sub> ,θ <sub>1</sub> ,R <sub>2</sub> ,φ <sub>2</sub> ,θ <sub>2</sub>			PHI?
				THETA?
				R?
				PHI?
				THETA?
	Go to step 3			
3	Execute operation			
	addition (then go to step 4)		[XEQ] ADD	
	subtraction (then go to step 4)		[XEQ] SUB	
	dot product		[XEQ] DOT	d=
	angle between		[R/S]	Δ=
	cross product (then go to step 4)		[XEQ] CROSS	
4	Answers are displayed:			X= (or) R=
			[R/S]	Y= (or) PHI=
			[R/S]	Z= (or) THETA=

# User Instructions

# Program Listings

01+LBL "SPH	SF00 for SPHERICAL	50 STO 05	
"		51 RDH	
02 SF 00		52 STO 04	
03 GTO 00		53 RDH	
04+LBL "REC	- - - - -	54 STO 03	
"	CF00 for Rectangular	55 STOP	
05 CF 00	- - - - -	56+LBL 01	
06+LBL 00	input	57 "R?"	input prompting
07 CLRG	initialization	58 FC? 00	
08 FIX 2		59 "X?"	
09 .1		60 PROMPT	
10 STO 06		61 STO IND	
11 XEQ 01		06	
12 XEQ 01		62 ISG 06	
13 FC? 00		63 "PHI?"	
14 STOP	- - - - -	64 FC? 00	
15 RCL 02	spherical to rectangular	65 "Y?"	
16 COS	conversion	66 PROMPT	
17 RCL 01		67 STO IND	
18 SIN		06	
19 RCL 00		68 ISG 06	
20 *		69 "THETA?"	
21 *		70 FC? 00	
22 LASTX		71 "Z?"	
23 RCL 02		72 PROMPT	
24 SIN		73 STO IND	
25 *		06	
26 RCL 00		74 ISG 06	
27 RCL 01		75 RTN	
28 COS		76+LBL "ADD	- - - - - CF02 for addition
29 *		"	
30 STO 02		77 CF 02	
31 RDH		78 GTO 01	
32 STO 01		79+LBL "SUB	- - - - - SF02 for subtraction
33 RDH		"	
34 STO 00		80 SF 02	
35 RCL 05		81+LBL 01	- - - - - addition or subtraction
36 COS		82 RCL 00	
37 RCL 04		83 RCL 03	
38 SIN		84 FS? 02	
39 RCL 03		85 CHS	
40 *		86 +	
41 *		87 STO 00	
42 LASTX		88 RCL 01	
43 RCL 05		89 RCL 04	
44 SIN		90 FS? 02	
45 *		91 CHS	
46 RCL 03		92 +	
47 RCL 04		93 STO 01	
48 COS		94 RCL 02	
49 *		95 RCL 05	

# Program Listings

96 FS? 02		145 RCL 00	
97 CHS		146 RCL 04	
98 +		147 *	
99 STO 02		148 RCL 01	
100 GTO 00		149 RCL 03	
101+LBL "DOT	----- Dot Product	150 *	
"		151 -	
102 RCL 00		152 STO 02	
103 RCL 03		153 RDN	
104 *		154 STO 01	
105 RCL 01		155 RCL 07	
106 RCL 04		156 STO 00	
107 *		157 GTO 00	
108 +		158+LBL "MAG	----- Magnitude
109 RCL 02		159 CF 03	
110 RCL 05		160 RCL 00	
111 *		161 RCL 01	
112 +		162 RCL 02	
113 "d="	----- Angle between two vectors	163+LBL 03	
114 XEQ 04		164 X†2	
115 RCL 00		165 X<>Y	
116 RCL 01		166 X†2	
117 RCL 02		167 +	
118 SF 03		168 X<>Y	
119 XEQ 03		169 X†2	
120 /		170 +	
121 RCL 03		171 SQRT	
122 RCL 04		172 FS? 03	
123 RCL 05		173 RTN	
124 XEQ 03		174 "M="	
125 /		175 GTO 04	
126 ACOS		176+LBL 00	
127 "d="		177 CF 01	
128 GTO 04	----- Cross Product	178 FC? 00	
129+LBL "CRO		179 GTO 00	
SS"		180 SF 24	
130 RCL 01		181 RCL 00	
131 RCL 05		182 RCL 01	
132 *		183 RCL 02	
133 RCL 04		184 SF 03	
134 RCL 02		185 XEQ 03	
135 *		186 STO 07	
136 -		187 X=0?	
137 STO 07		188 1 E-99	
138 RCL 02		189 RCL 02	
139 RCL 03		190 X<>Y	
140 *		191 /	
141 RCL 00		192 ACOS	
142 RCL 05		193 RCL 00	
143 *		194 X=0?	
144 -			

# Program Listings

# REGISTERS, STATUS, FLAGS, ASSIGNMENTS

DATA REGISTERS				STATUS			
00	x <sub>1</sub>	50		SIZE	008	TOT. REG.	63
	y <sub>1</sub>			ENG		FIX	2
	z <sub>1</sub>			DEG	X	SCI	
	x <sub>2</sub>					RAD	GRAD
05	y <sub>2</sub>			FLAGS			
	z <sub>2</sub>	55		#	INIT S/C	SET INDICATES	CLEAR INDICATES
	temp storage			00		spherical	rectangular
				01		+180	normal
10		60		02		subtract	add
				03		return	continue
15		65					
20		70					
25		75					
30		80					
35		85		ASSIGNMENTS			
40		90		FUNCTION	KEY	FUNCTION	KEY
				NONE			
45		95					

## VECTOR OPERATIONS

PROGRAM REGISTERS NEEDED: 56

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 4)



ROW 2 (4 - 9)



ROW 3 (10 - 17)



ROW 4 (18 - 30)



ROW 5 (31 - 43)



ROW 6 (44 - 56)



ROW 7 (57 - 62)



ROW 8 (63 - 67)



ROW 9 (68 - 71)



ROW 10 (71 - 76)



ROW 11 (76 - 80)



ROW 12 (80 - 90)



ROW 13 (91 - 101)



ROW 14 (101 - 108)



ROW 15 (109 - 117)



ROW 16 (118 - 125)



ROW 17 (126 - 129)



ROW 18 (129 - 140)



## VECTOR OPERATIONS

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 19 (141 - 153)



ROW 20 (154 - 159)



ROW 21 (159 - 171)



ROW 22 (172 - 178)



ROW 23 (179 - 186)



ROW 24 (187 - 195)



ROW 25 (195 - 203)



ROW 26 (204 - 211)



ROW 27 (211 - 217)



ROW 28 (217 - 222)



ROW 29 (222 - 226)




ROW 30 (226 - 232)



## BEAMS FIXED AT BOTH ENDS

This program calculates deflection, slope, moment and shear at any specified point along a beam of uniform cross section, fixed at both ends. Distributed loads, point loads, applied moments or combinations of all three may be modeled. By using the principle of superposition, complicated beams with multiple point loads, and multiple applied moments can be analyzed.

Equations:

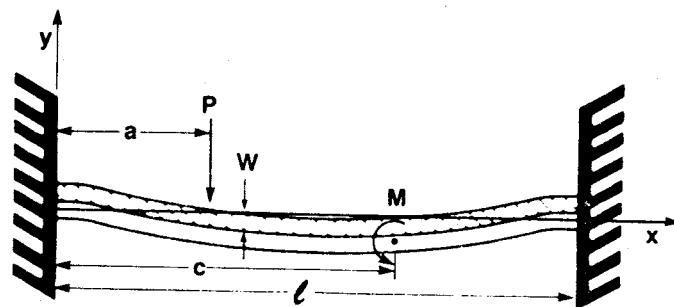

$$y = y_1 + y_2 + y_3 \quad (\text{total deflection})$$

$$y_1 = \frac{P(\ell - a)^2 x^2}{6EI\ell^3} [x(\ell+2a) - 3a\ell] * \quad (\text{deflection due to point load})$$

$$y_2 = \frac{Wx^2}{24EI} [x(2\ell-x) - \ell^2] \quad (\text{distributed load})$$

$$y_3 = \frac{M(\ell - c)x^2}{\ell^2 EI} \left[ \frac{cx}{\ell} + \frac{\ell - 3c}{2} \right] ** \quad (\text{applied moment})$$

$$\theta = \theta_1 + \theta_2 + \theta_3 \quad (\text{total slope})$$

$$\theta_1 = \frac{P(\ell - a)^2 x}{2EI\ell^3} [x(\ell+2a) - 2a\ell] * \quad (\text{slope due to point load})$$

$$\theta_2 = \frac{Wx}{12EI} [x(3l - 2x) - l^2] \quad (\text{slope due to distributed load})$$

$$\theta_3 = \frac{M(l - c)x}{l^2 EI} \left[ \frac{3cx}{l} + l - 3c \right]^{**} \quad (\text{slope due to applied moment})$$

$$M_x = M_{x1} + M_{x2} + M_{x3} \quad (\text{total moment})$$

$$M_{x1} = \frac{P(l - a)^2}{l^3} [x(l + 2a) - al]^* \quad (\text{moment due to point load})$$

$$M_{x2} = \frac{W}{12} [6x(l - x) - l^2] \quad (\text{moment due to distributed load})$$

$$M_{x3} = \frac{M(l - c)}{l^2} \left[ \frac{6cx}{l} + l - 3c \right]^{**} \quad (\text{moment due to applied moment})$$

$$V = V_1 + V_2 + V_3 \quad (\text{total shear})$$

$$V_1 = \frac{P(l - a)^2}{l^3} (l + 2a) \quad (\text{shear due to point load})$$

$$V_2 = \frac{-W}{2} (2x - l) \quad (\text{shear due to distributed load})$$

$$V_3 = \frac{-6M(l - c)}{l^3} c^{**} \quad (\text{shear due to applied moment})$$

where:

$y$  is the deflection at a distance  $x$  from the left support;

$\theta$  is the slope (change in  $y$  per change in  $x$ ) at  $x$ ;

$M_x$  is the moment at  $x$ ;

$V$  is the shear at  $x$ ;

$I$  is the moment of inertia of the beam;

$E$  is the modulus of elasticity of the beam;

$\ell$  is the length of the beam;  
 $P$  is a concentrated load;  
 $W$  is a uniformly distributed load with dimensions of force per unit length;  
 $M$  is an applied moment;  
 $a$  is the distance from the left support to the point load;  
 $c$  is the distance to the applied moment.

\*If  $x$  is greater than  $a$ ,  $a$  is replaced by  $(\ell - a)$  and  $x$  is replaced by  $(\ell - x)$ . The signs of  $\theta_1$  and  $V_1$  are also changed.


\*\*If  $x$  is greater than  $c$ ,  $x$  is replaced by  $(\ell - x)$  and  $c$  is replaced by  $(\ell - c)$ . The signs of  $y_3$  and  $M_{x3}$  are also changed.

#### Remarks:

Deflections must not significantly alter the geometry of the problem. Beams must be of constant cross section for deflection and slope equations to be valid. Stresses must be in the elastic region.

#### Example 1:

For the beam below, what are the values of deflection, slope, moment, and shear at an  $x$  of 114 inches?

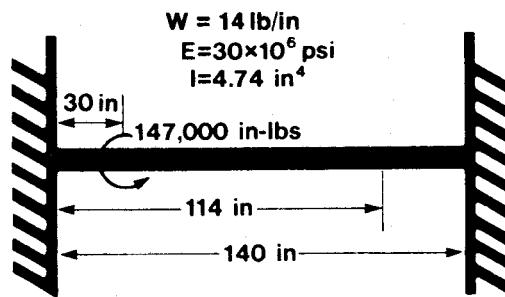

Keystrokes:

[USER]

[XEQ] [ALPHA] SIZE [ALPHA] 011

[XEQ] [ALPHA] FIX [ALPHA]

140 [R/S]

Display:

(set USER mode)

L?

E?

**Keystrokes:**

30 [EEX] 6 [R/S]

4.74 [R/S]

0 [R/S]

0 [R/S]

14 [R/S]

147000 [R/S]

30 [R/S]

114 [R/S]

[A]

[B]

[C]

[D]

**Display:**

I?

a?

P?

W?

M?

c?

X?

Y=43.72E-3

L=-3.155E-3

M=13.05E3

V=444.7E0

# User Instructions

# Program Listings

01♦LBL "FIX " 02 ENG 3 03 "L?" 04 PROMPT 05 STO 02 06 "E?" 07 PROMPT 08 "I?" 09 PROMPT 10 * 11 STO 09 12 "a?" 13 PROMPT 14 STO 06 15 "P?" 16 PROMPT 17 STO 03 18 "W?" 19 PROMPT 20 STO 04 21 "M?" 22 PROMPT 23 STO 05 24 "c?" 25 PROMPT 26 STO 07 27♦LBL E 28 "X?" 29 PROMPT 30 STO 00 31 STOP 32♦LBL B 33 RCL 00 34 SF 00 35 ENTER↑ 36 + 37 RCL 02 38 3 39 * 40 RCL 00 41 ENTER↑ 42 + 43 GTO 00 44♦LBL A 45 RCL 00 46 CF 00 47 X↑2 48 RCL 02 49 ENTER↑ 50 +	Initialization ----- angle	51 RCL 00 52♦LBL 00 53 SF 03 54 SF 01 55 - 56 RCL 00 57 * 58 RCL 02 59 X↑2 60 - 61 * 62 24 63 / 64 RCL 04 65 * 66 RCL 06 67 XEQ 01 68 RCL 01 69 * 70 RCL 08 71 RCL 02 72 * 73 3 74 X<>Y 75 * 76 FS? 00 77 LASTX 78 FS? 00 79 - 80 - 81 XEQ 06 82 6 83 / 84 FS? 00 85 3 86 FS? 00 87 * 88 FS? 00 89 XEQ 03 90 XEQ 04 91 RCL 07 92 XEQ 01 93 FC? 00 94 GTO 09 95 3 96 * 97 X<>Y 98 ENTER↑ 99 + 100♦LBL 09 101 +	angle or deflection
---	----------------------------------	---	------------------------

# Program Listings

<pre> 102 XEQ 06 103 XEQ 08 104 RCL 09 105 / 106 "Y=" 107 FS? 00 108 "z=" 109 GTO d 110+LBL D 111 SF 00 112 RCL 02 113 RCL 00 114 ENTER↑ 115 + 116 GTO 00 117+LBL C 118 CF 00 119 RCL 02 120 RCL 00 121 - 122 RCL 00 123 * 124 RCL 02 125 X↑2 126 6 127 / 128+LBL 00 129 SF 03 130 SF 01 131 - 132 2 133 / 134 RCL 04 135 * 136 RCL 06 137 XEQ 01 138 FS? 00 139 GTO 00 140 RCL 01 141 * 142 RCL 08 143 RCL 02 144 * 145 - 146+LBL 00 147 * 148 FS? 00 149 XEQ 03 150 XEQ 04 151 RCL 07 152 XEQ 01 </pre>	<p style="text-align: center;">-----</p> <p style="text-align: center;">shear</p> <p style="text-align: center;">-----</p> <p style="text-align: center;">Moment</p> <p style="text-align: center;">-----</p> <p style="text-align: center;">shear or moment</p> <p style="text-align: center;">-----</p>	<pre> 153 FS? 00 154 RDN 155 FS? 00 156 CLX 157 FS? 00 158 RCL 08 159 6 160 * 161 X&lt;&gt;Y 162 ENTER↑ 163 + 164 + 165 * 166 CF 03 167+LBL 08 168 FC? 00 169 XEQ 03 170+LBL 04 171 RCL 10 172 + 173 FS? 03 174 RTN 175 "M=" 176 FS? 00 177 "V=" 178 GTO d 179+LBL 01 180 CF 02 181 STO 08 182 RDN 183 STO 10 184 RCL 08 185 RCL 00 186 STO 01 187 X&lt;=Y? 188 GTO 00 189 SF 02 190 RCL 02 191 RCL 08 192 - 193 STO 08 194 RCL 02 195 RCL 00 196 - 197 STO 01 198+LBL 00 199 RCL 05 200 FS? 01 201 RCL 03 202 RCL 02 203 RCL 08 204 - </pre> <p style="text-align: right;">-----</p> <p style="text-align: right;">store a or c + sum</p> <p style="text-align: right;">-----</p> <p style="text-align: right;">x beyond loading point?</p> <p style="text-align: right;">-----</p> <p style="text-align: right;"><math>\frac{P(l-a)^2}{P^3}</math> or <math>\frac{M(l-a)}{l^3}</math></p>
---	---	---

# Program Listings

205	FS? 01		51	
206	X↑2			
207	*			
208	RCL 02			
209	3			
210	Y↑X			
211	/			
212	RCL 02		60	
213	RCL 08			
214	FS? 01			
215	GTO 00			
216	3			
217	*			
218	-			
219	RCL 02			
220	*			
221	2			
222	/			
223	RCL 08		70	
224	RCL 01			
225	*			
226	RTN			
227	*LBL 00	(l-3a) l		
228	ENTER↑			
229	+			
230	+			
231	CF 01			
232	RTN			
233	*LBL 03			
234	FS? 02			
235	CHS			
236	RTN			
237	*LBL 06			
238	*			
239	RCL 01			
240	*LBL 05			
241	FC? 00			
242	X↑2			
243	*			
244	RTN			
245	*LBL d			
246	ARCL X		90	
247	AVIEW			
248	STOP			
249	.END.			
50			00	

## **REGISTERS, STATUS, FLAGS, ASSIGNMENTS**

BEAMS FIXED AT BOTH ENDS

PROGRAM REGISTERS NEEDED: 52

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 4)



ROW 2 (5 - 12)



ROW 3 (12 - 20)



ROW 4 (21 - 28)



ROW 5 (28 - 37)



ROW 6 (38 - 47)



ROW 7 (48 - 58)



ROW 8 (59 - 68)



ROW 9 (69 - 79)



ROW 10 (80 - 88)



ROW 11 (88 - 93)



ROW 12 (94 - 103)



ROW 13 (103 - 109)



ROW 14 (109 - 117)



ROW 15 (117 - 128)



ROW 16 (129 - 137)



ROW 17 (138 - 148)



ROW 18 (148 - 153)



## BEAMS FIXED AT BOTH ENDS

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 19 (154 - 164)



ROW 20 (165 - 173)



ROW 21 (173 - 178)



ROW 22 (179 - 189)



ROW 23 (189 - 200)



ROW 24 (201 - 212)



ROW 25 (213 - 223)



ROW 26 (224 - 234)



ROW 27 (235 - 245)




ROW 28 (246 - 249)



## SIMPLY SUPPORTED BEAMS

This program calculates deflection, slope, moment and shear at any specified point along a simply supported beam of uniform cross section. Distributed loads, point loads, applied moments or combinations of all three may be modeled. By using the principle of superposition, complicated beams with multiple point loads, and multiple applied moments can be analyzed.

Equations:

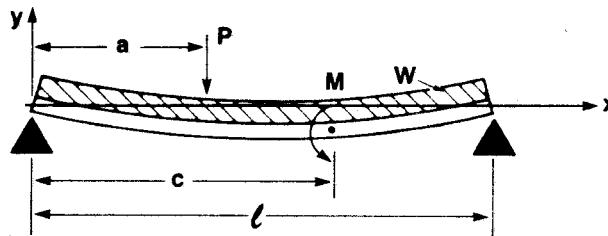

$$y = y_1 + y_2 + y_3 \quad (\text{total deflection})$$

$$y_1 = \frac{P(\ell - a)x}{6EI} [x^2 + (\ell - a)^2 - \ell^2] * \quad (\text{deflection due to point load})$$

$$y_2 = \frac{-Wx}{24EI} [\ell^3 + x^2 (x - 2\ell)] \quad (\text{deflection due to distributed load})$$

$$y_3 = \frac{-Mx}{EI} [c - \frac{x^2}{6\ell} - \frac{\ell}{3} - \frac{c^2}{2\ell}] ** \quad (\text{deflection due to applied moment})$$

$$\theta = \theta_1 + \theta_2 + \theta_3 \quad (\text{total moment})$$

$$\theta_1 = \frac{P(\ell - a)}{6EI} [3x^2 + (\ell - a)^2 - \ell^2] * \quad (\text{slope due to point load})$$

$$\theta_2 = - \frac{W}{24EI} [\ell^3 + x^2 (4x - 6\ell)] \quad (\text{slope due to distributed load})$$

$$\theta_3 = \frac{-M}{EI} [c - \frac{x^2}{2\ell} - \frac{\ell}{3} - \frac{c^2}{2\ell}] ** \quad (\text{slope due to applied moment})$$

$$M_x = M_{x1} + M_{x2} + M_{x3} \quad (\text{total moment})$$

$$M_{x1} = \frac{P(l - a)x^*}{l} \quad (\text{moment due to point load})$$

$$M_{x2} = -\frac{Wx}{2} [x - l] \quad (\text{moment due to distributed load})$$

$$M_{x3} = \frac{Mx^{**}}{l} \quad (\text{moment due to applied moment})$$

$$V = V_1 + V_2 + V_3 \quad (\text{total shear})$$

$$V_1 = \frac{P(l - a)*}{l} \quad (\text{shear due to point load})$$

$$V_2 = W \left(\frac{l}{2} - x\right) \quad (\text{shear due to distributed load})$$

$$V_3 = \frac{M}{l} \quad (\text{shear due to applied moment})$$

where:

$y$  is the deflection at a distance  $x$  from the left support;

$\theta$  is the slope (change in  $y$  per change in  $x$ ) at  $x$ ;

$M_x$  is the moment at  $x$ ;

$V$  is the shear at  $x$ ;

$I$  is the moment of inertia of the beam;

$E$  is the modulus of elasticity of the beam;

$l$  is the length of the beam;

$P$  is a concentrated load;

$W$  is a uniformly distributed load with dimensions of force per unit length;

$M$  is an applied moment;

$a$  is the distance from the left support to the point load;

$c$  is the distance to the applied moment.

\*If  $x$  is greater than  $a$ ,  $(l - a)$  is replaced by  $-a$  and  $x$  is replaced by  $(x - l)$ .


\* \*If  $x$  is greater than  $c$ ,  $x$  is replaced by  $(x - l)$  and  $c$  is replaced by  $(l - c)$ .

Remarks:

Deflections must not significantly alter the geometry of the problem. Beams must be of constant cross section for deflection and slope equations to be valid. Stresses must be in the elastic region.

Example 1:

Find the deflection, slope, internal moment and shear at distances of 0, and 60 inches for the beam below. Neglect the weight of the beam.

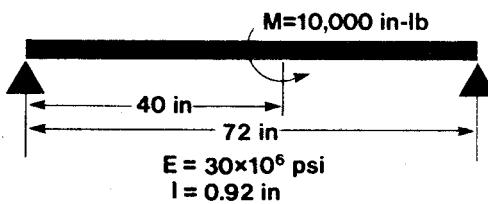

Keystrokes:

[USER]  
[XEQ] [ALPHA] SIZE [ALPHA] 011  
[XEQ] [ALPHA] SIM [ALPHA]  
72 [R/S]  
30 [EEX] 6 [R/S]  
.92 [R/S]  
0 [R/S]  
0 [R/S]  
0 [R/S]  
10000 [R/S]  
40 [R/S]  
0 [R/S]  
[A]

Display:

(set USER mode)

L?  
E?  
I?  
a?  
P?  
W?  
M?  
c?  
X?  
Y=0.000E0  
 $\Delta = -1.771E-3$   
M=0.000E0  
V=138.9E0  
X?  
Y=2.415E-3  
 $\Delta = 40.26E-6$   
M=-1.667E3  
V=138.9E0

[B]  
[C]  
[D]  
[E]  
60 [R/S]  
[A]  
[B]  
[C]  
[D]

# User Instructions

# Program Listings

<pre> 01♦LBL "SIM" " 02 ENG 3 03 "L?" 04 PROMPT 05 STO 02 06 "E?" 07 PROMPT 08 "I?" 09 PROMPT 10 * 11 STO 09 12 "a?" 13 PROMPT 14 STO 06 15 "P?" 16 PROMPT 17 STO 03 18 "W?" 19 PROMPT 20 STO 04 21 "M?" 22 PROMPT 23 STO 05 24 "c?" 25 PROMPT 26 STO 07 27♦LBL E 28 "X?" 29 PROMPT 30 STO 00 31 STOP 32♦LBL B 33 SF 00 34 GTO 00 35♦LBL A 36 CF 00 37♦LBL 00 38 RCL 02 39 ENTER↑ 40 * 41 LASTX 42 * 43 RCL 00 44 FS? 00 45 4 46 FS? 00 47 * 48 RCL 02 49 2 50 * </pre>	<p>Initialization</p> <p>-----</p> <p>Calculate θ or Y</p>	<pre> 51 FS? 00 52 3 53 FS? 00 54 * 55 - 56 RCL 00 57 X↑2 58 * 59 + 60 RCL 04 61 * 62 24 63 / 64 RCL 00 65 X&lt;&gt;Y 66 * 67 FS? 00 68 LASTX 69 CHS 70 XEQ 01 71 RCL 01 72 X↑2 73 FS? 00 74 3 75 FS? 00 76 * 77 RCL 08 78 X↑2 79 + 80 RCL 02 81 X↑2 82 - 83 * 84 6 85 / 86 XEQ 02 87 RCL 01 88 X↑2 89 RCL 02 90 / 91 6 92 / 93 FS? 00 94 3 95 FS? 00 96 * 97 RCL 02 98 3 99 / 100 + 101 RCL 08 </pre>	
---	--	--	--

# Program Listings

102 X <sup>12</sup>		153 -	
103 2		154 STO 08	
104 /		155 RCL 08	
105 RCL 02		156 STO 01	
106 /		157 RCL 06	
107 +		158 X>Y?	
108 RCL 08		159 GTO 00	
109 -		160 RCL 06	
110 *		161 CHS	
111 RCL 02		162 STO 08	
112 *		163 RCL 02	<u>P(l-a) x</u>
113 RCL 10		164 ST- 01	<u>l</u>
114 +		165♦LBL 00	
115 RCL 09		166 RCL 03	
116 /		167 RCL 08	
117 "Y="		168 *	
118 FS? 00		169 RCL 02	
119 "Z="		170 /	
120 GTO 05		171 FS? 00	
121♦LBL D	----- Calculate V or M	172 RTN	
122 SF 00		173 RCL 01	
123 GTO 00		174 *	
124♦LBL C		175 RTN	
125 CF 00		176♦LBL 02	----- store x and c
126♦LBL 00		177 RCL 10	
127 2		178 +	
128 /		179 STO 10	
129 RCL 02		180 RCL 00	
130 FS? 00		181 STO 01	
131 2		182 RCL 07	
132 FS? 00		183 STO 08	
133 /		184 X>Y?	
134 RCL 00		185 GTO 00	
135 -		186 RCL 00	
136 RCL 04		187 RCL 02	
137 *		188 -	
138 *		189 STO 01	
139 FS? 00		190 RCL 02	
140 LASTX		191 RCL 07	
141 XEQ 01		192 -	
142 XEQ 02		193 STO 08	
143 RCL 10		194♦LBL 00	<u>m</u>
144 +		195 RCL 05	<u>l</u>
145 "M="		196 RCL 02	
146 FS? 00		197 /	
147 "V="		198 FS? 00	
148 GTO 05		199 RTN	
149♦LBL 01	----- store l-a and x	200 RCL 01	
150 STO 10		201 *	
151 RCL 02		202 RTN	
152 RCL 06		203♦LBL 05	Display

# Program Listings

204 ARCL X		51	
205 AVIEW			
206 STOP			
207 .END.			
10		60	
20		70	
30		80	
40		90	
50		00	

# REGISTERS, STATUS, FLAGS, ASSIGNMENTS

DATA REGISTERS			STATUS			
			SIZE	011	TOT. REG. 51	USER MODE
			ENG	3	FIX SCI	ON X OFF
			DEG		RAD GRAD	
00	x	50				
	x, (x - l)					
	l					
	P					
	W					
05	M	55				
	a					
	c					
	(l - a), -a; c, l - c					
	EI					
10	SUM	60				
15		65				
20		70				
25		75				
30		80				
35		85				
ASSIGNMENTS						
			FUNCTION	KEY	FUNCTION	KEY
40		90				
45		95				

SIMPLY SUPPORTED BEAMS

PROGRAM REGISTERS NEEDED: 41

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 4)



ROW 2 (5 - 12)



ROW 3 (12 - 20)



ROW 4 (21 - 28)



ROW 5 (28 - 35)



ROW 6 (36 - 46)



ROW 7 (46 - 56)



ROW 8 (57 - 67)



ROW 9 (68 - 76)



ROW 10 (77 - 87)



ROW 11 (88 - 98)



ROW 12 (99 - 111)



ROW 13 (112 - 119)



ROW 14 (120 - 126)



ROW 15 (127 - 137)



ROW 16 (138 - 145)



ROW 17 (145 - 152)



ROW 18 (153 - 164)



**SIMPLY SUPPORTED BEAMS****HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING**

ROW 19 (164 - 175)



ROW 20 (176 - 187)



ROW 21 (188 - 199)




ROW 22 (200 - 207)



## CANTILEVER BEAMS

This program calculates deflection, slope, moment and shear at any specified point along a rigidly fixed, cantilever beam of uniform cross section. Distributed loads, point loads, applied moments or combinations of all three may be modeled. By using the principle of superposition, complicated beams with multiple point loads, applied moments and combined distributed loads may be analyzed.

Equations:

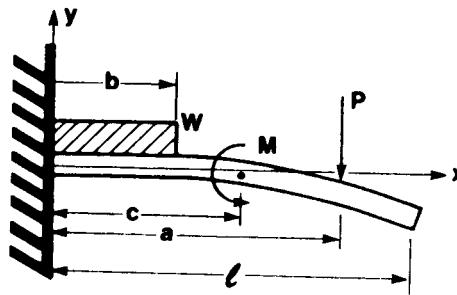

$$y = y_1 + y_2 + y_3 \quad (\text{total deflection})$$

$$y_1 = \frac{P x_1^2}{6 EI} (x_1 - 3a) - \frac{P a^2}{2 EI} (x - a) (x > a) * \quad (\text{deflection due to point load})$$

$$y_2 = \frac{-w x_2^2}{6 EI} \left[ x_2 \left( \frac{x_2}{4} - b \right) + 1.5 b^2 \right]$$

$$- \frac{w b^3}{6 EI} (x - b) \quad (x > b) \quad (\text{deflection due to distributed load})$$

$$y_3 = \frac{M x_3^2}{2 EI} + \frac{M c}{E I} (x - c) \quad (x > c) \quad (\text{deflection due to applied moment})$$

$$\theta = \theta_1 + \theta_2 + \theta_3 \quad (\text{total slope})$$

$$\theta_1 = \frac{Px_1}{2EI} (x_1 - 2a) \quad (\text{slope due to point load})$$

$$\theta_2 = \frac{Wx_2}{EI} \left[ x_2 \left( \frac{x_2}{6} - \frac{b}{2} \right) + \frac{b^2}{2} \right] \quad (\text{slope due to distributed load})$$

$$\theta_3 = \frac{Mx_3}{EI} \quad (\text{slope due to applied moment})$$

$$M_x = M_{x1} + M_{x2} + M_{x3} \quad (\text{total moment})$$

$$M_{x1} = P(x_1 - a) \quad (\text{moment due to point load})$$

$$M_{x2} = -W(x_2(x_2/2 - b) + b^2/2) \quad (\text{moment due to distributed load})$$

$$M_{x3} = M(x \leq c) \quad (\text{moment due to applied moment})$$

$$V = V_1 + V_2 + V_3 \quad (\text{total shear})$$

$$V_1 = P(x \leq a) \quad (\text{shear due to point load})$$

$$V_2 = W(b - x_2) \quad (\text{shear due to distributed load})$$

$$V_3 = 0 \quad (\text{shear due to applied moment})$$

where:

$y$  is the deflection at a distance  $x$  from the wall;

$\theta$  is the slope (change in  $y$  per change in  $x$ ) at  $x$ ;

$M_x$  is the moment at  $x$ ;

$V$  is the shear at  $x$ ;

$I$  is the moment of inertia of the beam;

$E$  is the modulus of elasticity of the beam;

$l$  is the length of the beam;  
 $P$  is a concentrated load;  
 $W$  is a uniformly distributed load with dimensions of force per unit length  
 $M$  is an applied moment;  
 $a$  is the distance from the foundation to the point load;  
 $b$  is the distance to the end of the distributed load;  
 $c$  is the distance to the applied moment;  
 $x_1 = x$  if  $x \leq a$  or  $a$  if  $x > a$ ;  
 $x_2 = x$  if  $x \leq b$  or  $b$  if  $x > b$ ;  
 $x_3 = x$  if  $x \leq c$  or  $c$  if  $x > c$ .


\*The notation  $(x > a)$  is interpreted as 1.00 if  $x$  is greater than  $a$  and as 0.00 if  $x$  is less than or equal to  $a$ .

#### Remarks:

Deflections must not significantly alter the geometry of the problem. Beams must be of constant cross section for deflection and slope equations to be valid. Stresses must be in the elastic region.

#### Example 1:

What is the deflection at  $x = 12$ ? Neglect the weight of the beam.

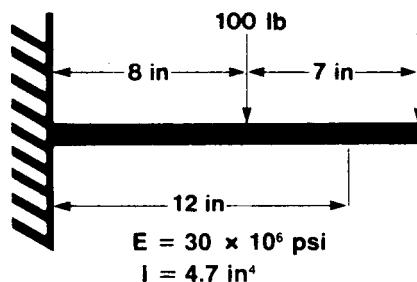

Keystrokes:

[USER

[XEQ] [ALPHA] SIZE [ALPHA] 011

[XEQ] [ALPHA] CANT [ALPHA]

Display:

(set USER mode)

L?

**Keystrokes:**

15 [R/S]

30 [EEX] 6 [R/S]

4.7 [R/S]

8 [R/S]

100 [R/S]

0 [R/S]

0 [R/S]

0 [R/S]

0 [R/S]

12 [R/S]

[A]

**Display:**

E?

I?

a?

P?

b?

W?

c?

M?

X?

Y=-211.8E-6

## User Instructions

# Program Listings

<pre> 01♦LBL "CAN T" 02 ENG 3 03 "L?" 04 PROMPT 05 STO 02 06 "E?" 07 PROMPT 08 "I?" 09 PROMPT 10 * 11 STO 10 12 "a?" 13 PROMPT 14 STO 06 15 "P?" 16 PROMPT 17 STO 03 18 "b?" 19 PROMPT 20 STO 07 21 "W?" 22 PROMPT 23 STO 04 24 "c?" 25 PROMPT 26 STO 08 27 "M?" 28 PROMPT 29 STO 05 30♦LBL E 31 "X?" 32 PROMPT 33 STO 00 34 STOP 35♦LBL A 36 RCL 06 37 XEQ 04 38 LASTX 39 * 40 CHS 41 3 42 * 43 FS? 02 44 0 45 RCL 01 46 RCL 06 47 3 48 * 49 - 50 RCL 01 </pre>	<p>Initialization</p> <p>-----</p> <p>deflection</p>	<pre> 51 * 52 + 53 RCL 03 54 * 55 RCL 01 56 * 57 RCL 07 58 XEQ 04 59 RCL 07 60 3 61 Y↑X 62 * 63 FS? 02 64 CLX 65 STO 09 66 RDN 67 RCL 01 68 4 69 / 70 RCL 07 71 - 72 RCL 01 73 * 74 RCL 07 75 X↑2 76 1.5 77 * 78 + 79 RCL 01 80 X↑2 81 * 82 RCL 09 83 + 84 RCL 04 85 * 86 - 87 RCL 08 88 XEQ 04 89 6 90 * 91 RCL 01 92 3 93 * 94 X&lt;&gt;Y 95 FS? 02 96 CLX 97 + 98 RCL 05 99 * 100 RCL 01 101 * </pre>	
--	--	--	--

# Program Listings

102 +		153 GTO d	
103 6		154♦LBL C	Moment
104 /		155 RCL 06	
105 RCL 10		156 XEQ 04	
106 /		157 RCL 01	
107 "Y="		158 RCL 06	
108 GTO d		159 -	
109♦LBL B	-----	160 RCL 03	
110 RCL 06	slope	161 *	
111 XEQ 04		162 RCL 07	
112 RCL 06		163 XEQ 04	
113 2		164 CLX	
114 /		165 RCL 01	
115 RCL 01		166 2	
116 -		167 /	
117 RCL 03		168 RCL 07	
118 *		169 -	
119 RCL 01		170 RCL 01	
120 *		171 *	
121 RCL 07		172 RCL 07	
122 XEQ 04		173 X†2	
123 RDN		174 2	
124 RCL 01		175 /	
125 6		176 +	
126 /		177 RCL 04	
127 RCL 07		178 *	
128 2		179 -	
129 /		180 RCL 08	
130 -		181 XEQ 04	
131 RCL 01		182 CLX	
132 *		183 RCL 05	
133 RCL 07		184 X<>Y	
134 X†2		185 FS? 02	
135 2		186 +	
136 /		187 "M="	
137 +		188 GTO d	
138 RCL 04		189♦LBL D	
139 *		190 RCL 06	
140 RCL 01		191 XEQ 04	
141 *		192 0	
142 -		193 FS? 02	
143 RCL 08		194 RCL 03	
144 XEQ 04		195 RCL 07	
145 RDN		196 XEQ 04	
146 RCL 05		197 CLX	
147 RCL 01		198 RCL 01	
148 *		199 RCL 07	
149 +		200 -	
150 RCL 10		201 RCL 04	
151 /		202 *	
152 "L="		203 -	

# Program Listings

204 "Y="		51	
205 GTO d			
206♦LBL 04			
207 CF 02			
208 RCL 00			
209 STO 01			
210 X<>Y			
211 X<=Y?			
212 STO 01			
213 X>Y?			
214 SF 02		60	
215 -			
216 RTN			
217♦LBL d	-----	Display	
218 ARCL X			
219 AVIEW			
220 STOP			
221 .END.			
30		70	
40		80	
50		90	
		00	

# REGISTERS, STATUS, FLAGS, ASSIGNMENTS

DATA REGISTERS			STATUS				
Reg #	Label	Value	SIZE	011	TOT. REG.	54	USER MODE
			ENG	3	FIX	SCI	ON X OFF
			DEG		RAD	GRAD	
00	x	50					
	x"(a)						
	l						
	P						
	W						
05	M	55					
	a						
	b						
	c						
	temp storage						
10	FI	60					
15		65					
20		70					
25		75					
30		80					
35		85					
ASSIGNMENTS							
			FUNCTION	KEY	FUNCTION	KEY	
40		90					
45		95					

CANTILEVER BEAMS

PROGRAM REGISTERS NEEDED: 44

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 3)



ROW 2 (4 - 12)



ROW 3 (12 - 19)



ROW 4 (20 - 27)



ROW 5 (27 - 35)



ROW 6 (36 - 45)



ROW 7 (46 - 58)



ROW 8 (58 - 68)



ROW 9 (69 - 79)



ROW 10 (80 - 90)



ROW 11 (91 - 102)



ROW 12 (103 - 110)



ROW 13 (111 - 121)



ROW 14 (122 - 132)



ROW 15 (133 - 144)



ROW 16 (144 - 153)



ROW 17 (153 - 162)



ROW 18 (163 - 173)



## CANTILEVER BEAMS

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 19 (174 - 184)



ROW 20 (185 - 191)



ROW 21 (191 - 199)



ROW 22 (200 - 207)



ROW 23 (208 - 218)



ROW 24 (218 - 221)



## BOLT TORQUE

This program may be used to calculate either the torque that will yield a specified bolt load or the load resulting from a specified torque. The maximum shear stress in the body of the screw may also be calculated.

Equations:

$$T = W \frac{D_m}{2} \left[ \frac{\tan \alpha + f_t / \cos \theta}{1 - f_t \tan \alpha / \cos \theta} \right] + W f_c \frac{D_c}{2}$$

$$\tau_{\max} = \sqrt{(W/S A_r)^2 + (16T_t/\pi D_r^3)^2}$$

$$T_t = T - W f_c \frac{D_c}{2}$$

where:

$T$  is the applied torque;

$W$  is the bolt load;

$D_m$  is the mean thread diameter;

$\alpha$  is the helix angle of the thread;

$f_t$  is the coefficient of thread friction;

$\theta$  is one-half of the thread angle;

$f_c$  is the collar coefficient of friction;

$D_c$  is the collar diameter;

$\tau_{\max}$  is the maximum shear stress in the body of the screw;

$A_r$  is the root area;

$D_r$  is the diameter at the root of the thread.

Note:

The accuracy with which  $f_t$  and  $f_c$  are approximated has a significant effect on the applicability of the resulting computations.

**References:**

Hall, Holowenko, Laughlin Machine Design, Schaum's Outline Series, McGraw-Hill Co., 1961.

**Example:**

Some bolts must exert a force of 11,000 pounds each. What torque is necessary to achieve this load assuming the following specifications? What is the shear stress in the bolt?

$$\begin{array}{ll} D_m = 0.3344 \text{ in} & f_c = 0.30 \\ \alpha = 3.40^\circ & D_c = 0.8750 \\ f_t = 0.15 & D_r = 0.2983 \\ \theta = 30^\circ & \end{array}$$

**Keystrokes:**

[XEQ] [ALPHA] SIZE [ALPHA] 010

[XEQ] [ALPHA] BOLT [ALPHA]

3.4 [R/S]

30 [R/S]

0.15 [R/S]

0.3344 [R/S]

0.8750 [R/S]

0.3 [R/S]

11,000 [R/S]

[R/S]

[XEQ] SHEAR

0.2983 [R/S]

**Display:**

a?

$\Delta$ ?

FT?

DM?

DC?

FC?

W?

T?

T=1876.03

DR?

TMAX=114,335.98

# User Instructions

# Program Listings

<pre> 01♦LBL "BOL T" 02 FIX 2 03 "a?" 04 PROMPT 05 TAN 06 STO 03 07 "z?" 08 PROMPT 09 COS 10 STO 02 11 "FT?" 12 PROMPT 13 STO 01 14 RCL 02 15 / 16 RCL 03 17 + 18 1 19 RCL 01 20 RCL 03 21 * 22 RCL 02 23 / 24 - 25 / 26 STO 01 27 "DM?" 28 PROMPT 29 2 30 / 31 STO 06 32 "DC?" 33 PROMPT 34 2 35 / 36 STO 05 37 "FC?" 38 PROMPT 39 STO 04 40 "W?" 41 PROMPT 42 STO 07 43 CLX 44 "T?" 45 PROMPT 46 X=0? 47 GTO B 48 STO 08 49♦LBL A 50 RCL 08 </pre>	<p>Initialization</p> <p>-----</p> <p>Common to both W + T</p> <p>-----</p> <p>Calculate W</p>	<pre> 51 RCL 01 52 RCL 06 53 * 54 RCL 04 55 RCL 05 56 * 57 + 58 / 59 STO 07 60 "W=" 61 GTO 05 62♦LBL B 63 RCL 01 64 RCL 06 65 * 66 RCL 04 67 RCL 05 68 * 69 + 70 RCL 07 71 * 72 STO 08 73 "T=" 74 GTO 05 75♦LBL "SHE AR" 76 "DR?" 77 PROMPT 78 2 79 PI 80 / 81 X&lt;&gt;Y 82 / 83 LASTX 84 / 85 8 86 LASTX 87 / 88 RCL 01 89 RCL 06 90 * 91 RCL 07 92 * 93 * 94 RCL 07 95 R-P 96 X&lt;&gt;Y 97 RDN 98 * 99 "TMAX=" 100♦LBL 05 </pre>	<p>-----</p> <p>Calculate T</p> <p>-----</p> <p>Calculate maximum shear stress</p> <p>-----</p> <p>Display</p>
--	--	--	--

# Program Listings



BOLT TORQUE

PROGRAM REGISTERS NEEDED: 23

HEWLETT PACKARD  
SOLUTION BOOK:  
CIVIL ENGINEERING

ROW 1 (1 - 3)



ROW 2 (4 - 11)



ROW 3 (12 - 24)



ROW 4 (25 - 32)



ROW 5 (32 - 40)



ROW 6 (40 - 48)



ROW 7 (49 - 60)



ROW 8 (60 - 69)



ROW 9 (70 - 75)



ROW 10 (75 - 81)



ROW 11 (82 - 94)



ROW 12 (95 - 101)



ROW 13 (102 - 104)



## Hewlett-Packard Software

In terms of power and flexibility, the problem-solving potential of the HP-41 programmable calculator is nearly limitless. And in order to see the practical side of this potential, HP has different types of software to help save you time and programming effort. Every one of our software solutions has been carefully selected to effectively increase your problem-solving potential. Chances are, we already have the solutions you're looking for.

## Application Pacs

To increase the versatility of your HP-41, HP has an extensive library of "Application Pacs". These programs transform your HP-41 into a specialized calculator in seconds. Included in these pacs are detailed manuals with examples, miniature plug-in Application Modules, and keyboard overlays. Every Application Pac has been designed to extend the capabilities of the HP-41.

You can choose from:

Aviation (Pre-Flight Only) 00041-15018	Statistics 00041-15002
Clinical Lab 00041-15024	Stress Analysis 00041-15027
Circuit Analysis 00041-15024	Games 00041-15022
Financial Decisions 00041-15004	Home Management 00041-15023
Mathematics 00041-15003	Machine Design 00041-15020
Structural Analysis 00041-15021	Navigation 00041-15017
Surveying 00041-15005	Real Estate 00041-15016
Securities 00041-15026	Thermal and Transport Science 00041-15019
	Petroleum Fluids 00041-15039

## Users' Library

The Users' Library provides the best programs from contributors and makes them available to you. By subscribing to the HP-41 Users' Library you'll have at your fingertips literally hundreds of different programs from many different application areas.

## \*Users' Library Solutions Books

Hewlett-Packard offers a wide selection of Solutions Books complete with user instructions, examples, and listings. These solution books will complement our other software offerings and provide you with a valuable tool for program solutions.

You can choose from:

Business Stat/Marketing/Sales 00041-90094	Civil Engineering 00041-90089
Home Construction Estimating 00041-90096	Heating, Ventilating & Air Conditioning 00041-90140
Lending, Saving and Leasing 00041-90086	Mechanical Engineering 00041-90090
Real Estate 00041-90136	Solar Engineering 00041-90138
Small Business 00041-90137	Calendars 00041-90145
Geometry 00041-90084	Cardiac/Pulmonary 00041-90097
High-Level Math 00041-90083	Chemistry 00041-90102
Test Statistics 00041-90082	Games 00041-90099
Antennas 00041-90093	Optometry I (General) 00041-90143
Chemical Engineering 00041-90100	Optometry II (Contact Lens) 00041-90144
Control Systems 00041-90092	Physics 00041-90142
Electrical Engineering 00041-90088	Surveying 00041-90141
Fluid Dynamics and Hydraulics 00041-90139	Time Module Solutions 00041-90395
Games II 00041-90443	

\*Some books require additional memory modules to accomodate all programs.

## **CIVIL ENGINEERING**

STEEL COLUMN FORMULA  
REINFORCED CONCRETE BEAMS  
STRESS IN THICK-WALLED CYLINDERS  
PROPERTIES OF SPECIAL SECTIONS  
COMPRESSIVE BUCKLING  
VECTORS  
BEAMS FIXED AT BOTH ENDS  
SIMPLY SUPPORTED BEAMS  
CANTILEVER BEAMS  
BOLT TORQUE

